


GMV5/GMV5S 直流变频多联机 安装调试维修手册


4.2 2 室内机线路图

1) GMV-ND**PL/A 系列风管机


GMV-ND22/25/28/32/36/40/45/50PL/A

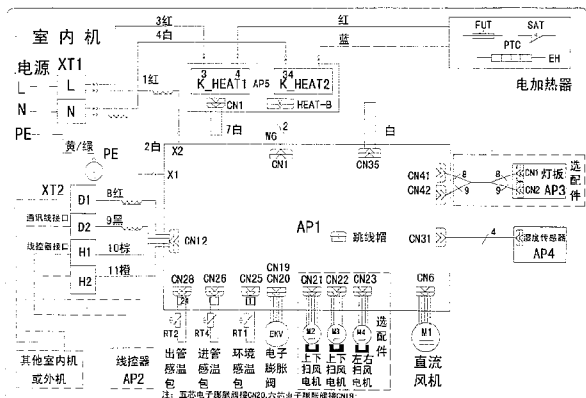


GMV-ND56/63/71/80PL/A

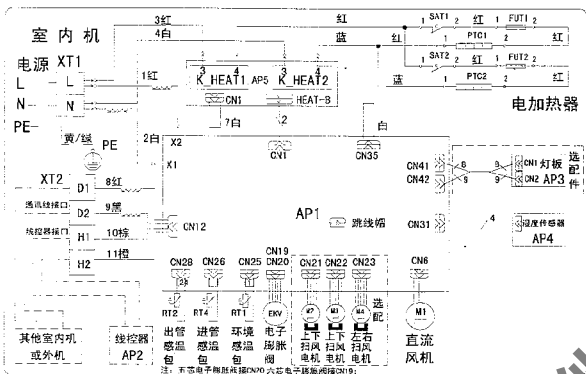

GMV-ND90/100/112/125/140PL/A/S

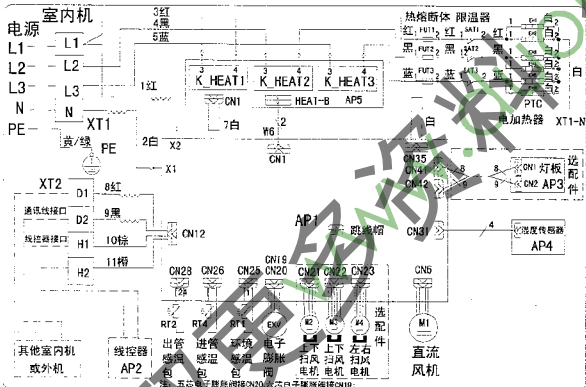


GMV-NDR22/25/28/32/36/40/45/50/56/63/71/80/90/100/112/125/140PL/A

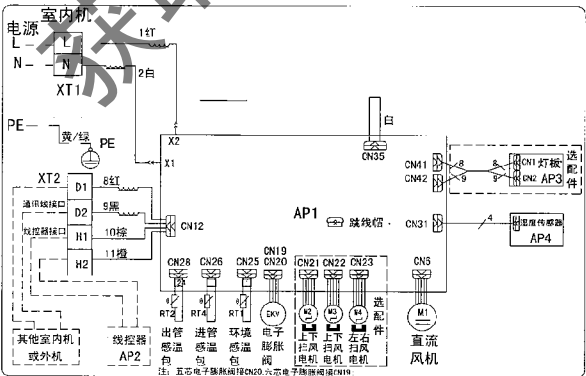


2) GMV-ND**PLS/A 系列风管机


GMV-ND22/25/28/32/36/40/45/50PLS/A

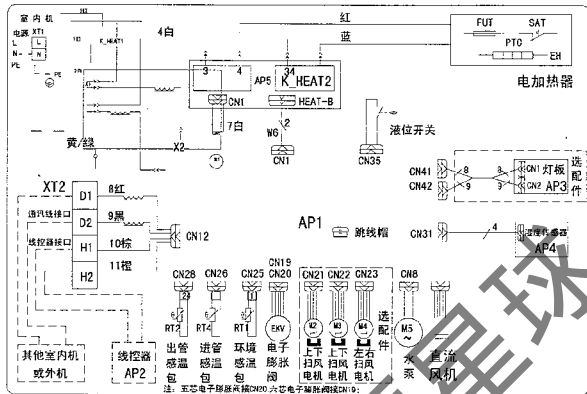

GMV-ND56/63/71/80PLS/A

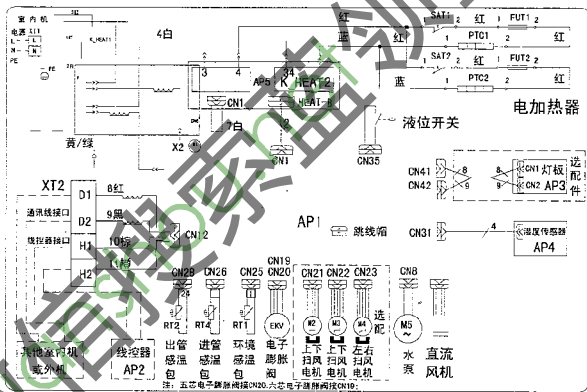

GMV-ND90/100/112/125/140PLS/AS

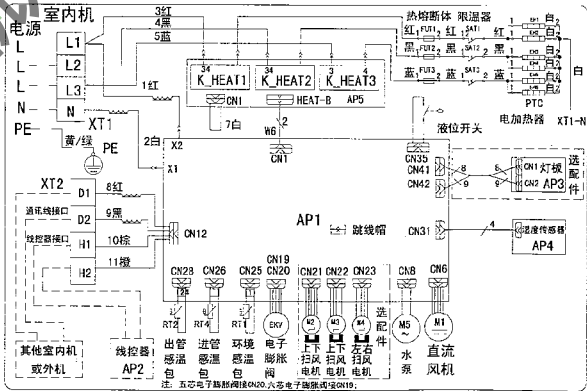

GMV-NDR22/25/28/32/36/40/45/50/56/63/71/80/90/100/112/125/140PLS/A

