

中兴 ZXDU500 工程安装指导

编写人员: 冯全军

地点: 罗定华石大未 CDMA 基站


时间: 2015/12/22

<p>设备名称</p>	<p>中兴 ZXDU500</p>												
<p>设备型号及识别</p>	 <p>输入方式</p> <p>1入: 配空气开关QF0 (标准配置).</p> <p>2入: 配空气开关QF01, QF02, 带机械互锁.</p> <p>切换: 配接触器KM01, KM02, 带机械与电气互锁.</p> <p>Input Modes</p> <p>C Source With QF0;</p> <p>Sources With QF01 and QF02;</p> <p>Sources With KM01 and KM02.</p> <table border="1" data-bbox="1082 1003 1362 1160"> <thead> <tr> <th colspan="2">Distribution</th> </tr> </thead> <tbody> <tr> <td>AC Input Modes</td> <td><input checked="" type="checkbox"/> 1 <input type="checkbox"/> 2 <input type="checkbox"/> 3</td> </tr> <tr> <td>LLVD1</td> <td>1 Loads</td> </tr> <tr> <td>LLVD2</td> <td>10 Loads</td> </tr> <tr> <td>AC Output</td> <td>Loads</td> </tr> <tr> <td>Selectable Unit</td> <td>Emergency Lighting</td> </tr> </tbody> </table>	Distribution		AC Input Modes	<input checked="" type="checkbox"/> 1 <input type="checkbox"/> 2 <input type="checkbox"/> 3	LLVD1	1 Loads	LLVD2	10 Loads	AC Output	Loads	Selectable Unit	Emergency Lighting
Distribution													
AC Input Modes	<input checked="" type="checkbox"/> 1 <input type="checkbox"/> 2 <input type="checkbox"/> 3												
LLVD1	1 Loads												
LLVD2	10 Loads												
AC Output	Loads												
Selectable Unit	Emergency Lighting												
<p>监控单元型号版本及识别</p>	 <p>设备类型: ZXDU500U3.0</p> <p>软件版本: 3.02</p> <p>软件日期: 2003.06.19</p>												

密码 4 个 0



设备地址 1

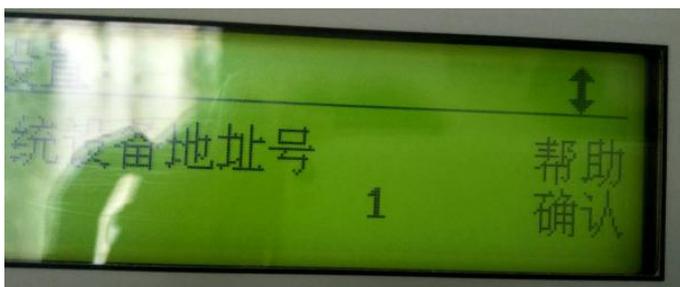


波特率 9600



通讯接口: RS232 (可以直接插上 485 转换头, 位置合适)

接口识别与
接线方法及
示意图

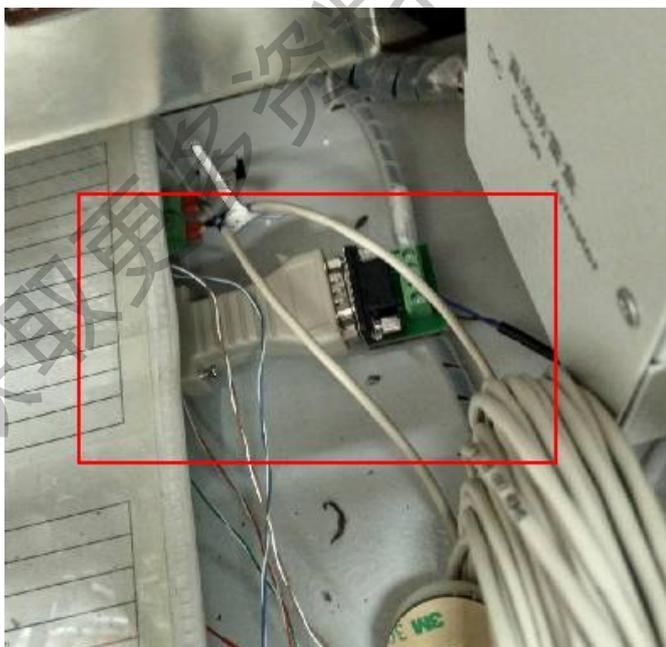

通信协议	<p>波特率 9600 无校验 8 数据位 1 停止位 指令可发送以下指令 发送: 7e 32 30 30 31 34 30 34 46 30 30 30 30 46 44 39 46 0d 返回如下以 7E 开头 0D 结尾的指令为通信正常。 接收: 7E 32 30 30 31 34 30 30 30 30 30 30 46 44 42 39 0D</p> <p>选择协议库:</p> <div data-bbox="280 562 1262 707"><pre>中兴-*ZXDU300V3.0 ZXDU500 lib06ZXDU300.so ZXDU600-24</pre></div>
其它特殊情况说明	

获取更多资料 微信搜索 蓝领星球