

## 6DLDB-20E4诊断用

故障码	闪码	故障描述
P0100	234	进气流量传感器相关故障
P0101	234	
P0101	234	
P0101	234	
P0101	234	
P0101	234	
P0101	234	
P0101	234	
P0103	234	
P0103	234	
P0102	234	
P0645	313	空调压缩机相关故障
P0645	313	
P0645	313	
P0645	313	
P0647	313	
P0646	313	
P0647	313	
P0646	313	
U0424	314	空调开关
U0466	314	
P0101	281	进气流量相关故障
P0101	281	
P0402	281	
P0401	281	
P0100	281	
P2609	323	空气加热相关故障
P2609	323	
P2609	323	
P2609	323	
P2609	322	
P1000	481	用于空气加热测试用的进气温度传感故障
P1001	481	
P1002	481	
P1003	481	
P1004	481	
P1005	481	
P0659	114	执行继电器故障
P2671	115	
P2686	116	
P0658	114	
P2670	115	
P2685	116	
P0563	124	系统电源故障
P0562	124	
P0563	124	
P0562	124	
P0504	223	刹车故障
P0571	223	
U0073	411	CAN通讯的节点故障（A节点用）
U0073	412	
U0073	0	
U0073	0	
U0073	411	
U0073	412	

微信搜索索蓝领星球

U0073	0	
U0073	0	
P0116	242	水温传感器
P0116	242	
U0116	241	
P0118	241	水温传感器
P0117	241	
P0116	242	
P0704	222	离合器故障
U1400	222	
P1038	521	
P1039	522	
P1040	523	
P1006	524	扭矩结构故障
P1041	534	
P1042	533	
P1043	532	
P1044	531	
U0100	0	ACK超时故障
U0100	413	大气条件故障
U0113	422	
U0113	422	NOX信号修正报文故障
U0113	422	
U0113	422	
U0113	421	NOX传感器相关报文
U0113	421	
U0113	421	
U0113	421	
U0113	0	
U0113	0	
U0113	0	DM19报文相关故障
U0113	0	
U0113	0	
U0113	0	
U0113	0	
P1400	423	
P1401	423	DM1DCU报文相关故障
P1402	423	
P1403	423	
P1404	423	
P1405	424	
U0113	0	SAE故障
U0129	0	电子刹车控制器故障
U0100	413	EEC1报文故障
U0100	0	EEC2报文故障
U0100	0	EEC3报文故障
U0100	0	EFL P1报文超时
U1100	0	
U0100	413	
U0100	0	
U0103	425	
U0291	425	
U0100	0	
U0100	413	
U0113	421	
U0113	422	
U0113	421	

微信搜索 蓝领星球

资料

U0113	422	
U0113	421	
U0113	422	
U0113	421	
U0113	422	
U0113	421	
U0113	422	
U0113	421	
U0113	422	
U0113	421	
U0113	422	
U0113	421	
U0113	422	
U0113	421	
U0113	422	
U0113	421	
U0113	422	
U0113	421	
U0113	422	
U0104	0	
U0113	421	
U0113	422	
U0113	421	
U0113	422	
U0113	421	
U0113	422	
U0113	421	
U0113	422	
U0113	421	
U0113	422	
U0100	0	
U0100	0	
U1103	0	
U1101	0	
U0121	414	
U0121	414	
U0121	414	
U0121	414	
U0121	415	
U0121	415	
U0121	415	
U0121	415	
U0121	416	
U0121	416	
U0121	417	
U0121	417	
U0121	417	
U0121	417	
U0121	418	
U0121	418	
U0121	418	
U0121	418	
U0121	418	
U0121	414	
U0121	414	
U0121	415	
U0121	415	
U0121	416	
U0121	417	
U0121	417	
U0121	418	
U0121	418	
U0104	0	

资料 微信搜索 蓝领星球

U1105	0	
U0100	0	
U0100	0	
U0100	0	
U0100	0	
U0100	0	
U0100	0	
U0100	0	
U0100	0	
U0100	0	
U0100	0	
U0100	0	
U0100	0	
U1106	0	
P1007	511	扭矩限值激活故障
P0575	341	巡航故障
P0607	111	系统芯片故障
P0607	111	
P0563	124	电源模块故障
P0562	124	
P1500	342	发动机制动可信性故障
P2536	343	发动机副停车故障 (CAN)
P2536	343	发动机副启动故障 (CAN)
P0475	315	电子泄压阀执行继电器
P0475	315	
P0478	315	
P0477	315	
P062F	117	EEP相关故障
P062F	117	
P062F	117	
P0000	351	EGR相关故障
P0000	352	
P0000	352	
P0000	352	
P0000	353	
P0000	353	
P0000	353	
P0000	353	
P0000	353	
P0000	353	
P0000	352	
P0000	352	
P0000	354	
P0000	354	
P0000	355	
P0000	355	
P0000	354	
P0000	354	
P0000	352	
P0000	352	
P0000	355	
P0000	355	
P0000	354	
P1008	512	喷油中断故障
P0219	513	发动机超速保护故障
P1009	514	
P100A	344	发动机转速输出故障
P100B	344	
P100C	344	
P100D	344	

微信搜索 蓝领星球

多资料

U1401	232		
P2229	232	环境压力传感器相关故障	
P2228	232		
P0071	235		
P0073	235	环境温度传感器相关故障	
P0072	235		
P0341	123		
P0340	123	凸轮传感器故障	
P0340	123		
P0336	122	曲轴传感器故障	
P0335	122		
P0475	311	排气制动阀相关故障	
P0475	311		
P0478	311		
P0477	311		
P0476	311		
P0475	311		
P060B	111	FADC故障	
P0480	312	风扇相关故障	
P0480	312		
P0480	312		
P0480	312		
P0692	312		
P0692	312		
P0691	312		
P0691	312		
P0481	312		
P0481	312		
P0694	312		
P0693	312		
P0480	316		
P0495	316		
P0494	316		
P0611	482		燃油喷射量平衡相关故障
P0611	482		
P0611	482		
P0611	482		
P0611	482		
P1046	212	燃油滤清堵塞故障 (ADC)	
P1047	212		
P1048	213	燃油滤清堵塞故障 (DIO)	
P1049	213		
P1032	216	燃油滤清加热故障	
P1033	216		
P1034	216		
P1035	216		
P2267	214	燃油滤清水位故障 (ADC)	
P2266	214		
P2269	211	燃油滤清水位故障 (DIO)	
P0460	217	燃油箱空故障	
P0183	215	燃油温度传感器故障	
P0182	215		
P0181	215		
U1402	227	变速箱位置传感器故障	
P0381	332	预热灯相关故障	
P0381	332		
P0381	332		

微信搜索 蓝领星球

P0381	332	
P0110	321	空气加热器故障
P0110	321	
P0113	321	空气加热器故障
P0112	321	
P100E	0	喷油增压器平衡故障
P100F	0	喷油高压泵平衡故障
P1010	0	系统定义的最大喷油量故障
P1011	0	喷油运行时间故障
POA0F	0	喷油单元启动测试故障
P0087	276	油压过低导致喷油中断故障
P062B	483	喷油器调整值丢失或者错误故障
P062B	483	
P062B	483	
P062B	483	
P062B	483	
P062B	483	
P062D	151	喷油器供电模块1故障
P062E	151	喷油器供电模块2故障
P062B	153	喷油器控制芯片故障
P0201	141	喷油器开路
P0202	142	
P0203	143	
P0204	144	
P0205	145	
P0206	146	
P0263	141	喷油器其他故障
P0266	142	
P0269	143	
P0272	144	
P0275	145	
P0278	146	
P0262	141	喷油器短路故障
P0265	142	
P0268	143	
P0271	144	
P0274	145	
P0277	146	
P0261	141	喷油器低端与高端短路
P0264	142	
P0267	143	
P0270	144	
P0273	145	
P0276	146	
P251C	345	多状态开关故障
P0251	133	油量流量控制单元故障
P0251	133	
P0252	133	
P0254	133	
P0253	133	
P0254	133	
P0253	133	
P0254	133	
P0253	133	
P0650	331	MIL灯故障
P0650	331	
P0650	331	
P0650	331	

P251B	345	多状态开关故障
P060B	262	ADC监控故障
P060B	262	ADC监控故障
P060B	262	ADC监控故障
P060C	262	通讯管理模块内部故障
P060C	262	
P060C	262	ROM测试故障
P060C	263	多中断通道测试相关故障
P060C	263	
P060C	263	
P060C	263	
P060C	263	
P060C	263	
P060C	263	
P060C	263	
P060C	263	
P060C	263	
P1012	264	油门电压信号不可信
P1013	264	发动机转速信号监控故障
P1014	264	发动机喷油器激活相关故障
P1015	264	
P1016	264	
P1017	264	
P1018	264	
P1019	264	
P101A	261	激活时间超限故障
P101B	264	喷油量波动修正故障
P101C	264	轨压传感器监控不可信
P1045	264	油门电压监控不可信
P101D	264	当前与允许的扭矩对比故障
P101E	264	发动机内部扭矩相关故障
P101F	264	
P1020	264	
P1600	265	
P1601	265	
P068A	125	主继电器故障
P068B	125	
P2200	421	NOX传感器电源故障
P2201	421	NOX传感器相关的故障（未用）
P2204	421	
P2200	421	
P2200	421	
P2200	421	
P2200	421	
P2200	421	
P2200	421	
P2200	421	
P2201	421	
P2201	421	
P2201	421	
P2201	421	
P2200	421	NX传感器准备就绪故障
P2201	421	NX传感器信号超上限
P2201	421	NX传感器信号低于下限
P2200	421	NX传感器开路故障
P2200	421	NX传感器短路故障
P253E	345	多状态开关不可信故障
P0000	484	

P0000	484	
P0000	484	
P0000	484	
P0000	484	
P0000	484	
P0000	484	
P0000	484	
P0000	484	
P0000	484	
P0000	484	
P0000	484	
P0000	484	
P0000	484	
P0000	484	
P0000	484	
P0000	484	
P0000	484	
P0000	484	
P0000	484	
P0000	484	
P0000	484	
P0000	484	
P0000	484	
P0000	484	
P0000	484	
P1021	485	
P1022	485	
P1023	485	
P1024	485	
P1025	485	
P1026	485	
P1027	485	
P1028	485	
P1029	485	OBD潜在的不可删除故障的错误状态
P102A	485	
P102B	485	
P102C	485	
P102D	485	
P102E	485	
P102F	485	
P1030	485	
P060C	111	
P060C	111	
P060C	111	WDA中断条件相关故障
P060C	111	
P250D	246	
P250C	246	
P250B	246	机油液位传感器相关故障
P252F	246	
P250F	246	
P160B	334	
P160C	334	
P160D	334	机油压力灯相关故障
P160E	334	
P0524	243	
P0521	243	
P0523	243	
P0524	243	机油压力传感器相关故障
P0520	243	
P0523	243	
P0522	243	
P0196	244	
U1403	244	

微信搜索蓝领星球

资料



P0198	244	机油温度传感器相关故障
P0197	244	
P0196	244	
P2263	282	进气压力偏移故障
P2263	282	
P1031	0	
P006D	231	进气压力信号故障
P006D	231	
P0238	231	进气压力传感器相关故障
P0237	231	
P0000	471	排气管颗粒堵塞故障
P0000	472	排气管颗粒被移走故障
P0000	473	颗粒捕集器相关故障
P0000	473	
P0000	473	
P0000	473	
P0000	473	
P0000	473	
P0000	473	
P0089	134	泄压阀打开次数超过上限
P0089	0	泄压阀打开轨压升高
P0089	0	强制打开泄压阀导致轨压波动
P0089	135	泄压阀打开
P1036	136	泄压阀成功打开喷油量平衡故障
P1037	136	泄压阀打开次数或者时间超过限值
P0089	136	泄压阀打开时间超过最大值
P060C	111	
P0251	251	轨压控制器相关故障
P0251	252	
P0251	255	
P0251	253	
P0087	256	
P0088	271	
P0088	272	
P1050	273	
P0251	274	
P0194	275	轨压倾斜度故障
P0191	132	轨压偏差故障
P0191	132	
P0088	136	泄压阀打开轨压过大故障
P0193	131	轨压传感器相关故障
P0192	131	
P203B	434	尿素喷射量减少不合理故障
P3051	435	不可删除故障修正因子超上限
P3052	435	不可删除故障修正因子低于下限
P0420	0	排放超标
P0420	431	排放超7.0
P0420	432	排放超5.0
P2214	421	下游NOX传感器信号不可信故障
P2214	421	下游NOX信号超过上限可信值
P2214	421	下游NOX信号低于下限可信值
P2214	421	下游NOX传感器信号不可信故障
P2201	422	上游NOX信号超过上限可信值
P2201	422	上游NOX信号低于下限可信值
P3042	436	条件满足尿素喷射不释放
P3062	438	剩余尿素的形式距离相关故障
P3063	438	
P3064	438	
P3065	437	SCR填充位置监控硬件故障

P3050	441	尿素回流管解冻失败
P3053	441	尿素压力管路堵塞
P3054	441	尿素压力不稳定
P0669	119	ECU温度过高
P3015	447	上次驾驶循环未排尽尿素
P3039	442	喷射时尿素压力超过上限
P3056	443	喷射时尿素压力低于下限
P3039	442	尿素压力过高（无论状态）
P3040	441	尿素压力无法建立
P3049	441	回流压力管故障
P3041	441	喷射结束后，尿素压力无法下降
P2043	446	尿素箱温度可信性故障
P0667	119	ECU温度可信性故障
P0426	444	上游排温可信性故障
P0426	444	
P0426	444	
P2047	453	尿素喷射阀卡死
P3014	453	尿素回流阀卡死
P3066	445	尿素液位传感器可信性故障
P3067	445	
P3000	441	尿素供应模块至尿素喷射阀堵塞
P3057	455	尿素泵不可信
P3058	455	尿素泵加热温度传感器不信
P3059	455	冷启动加热时尿素泵温度传感器可信性故障
P3060	456	尿素泵温度传感器不信
P3061	456	冷车启动时尿素泵温度传感器可信性故障
P203B	446	尿素箱温度传感器无有效上升
P2068	438	尿素存量不足时SCE启动次数超过限值
U1404	345	来自can的多状态开关故障
P3029	455	SM温度测量不可信
P3029	455	
P3038	454	温度测量无法进行
P2062	454	SM温度测量信号不可信
P2062	454	
P3029	456	SM温度测量信号不可信
P3029	456	
P0123	221	油门1/2信号高
P0223	221	
P1501	229	远程油门1/2信号高
P1502	229	
P0122	221	油门1/2信号低
P0222	221	
P1503	229	远程油门1/2信号低
P1504	229	
P203D	445	尿素箱液位传感器电路故障
P203C	445	
P0643	112	传感器供电电路故障
P0653	112	
P0699	112	
P1602	113	ECU内部12V供电电源1高
P1603	113	ECU内部12V供电电源1低
P1602	113	ECU内部12V供电电源高
P1603	113	ECU内部12V供电电源低
P060C	111	停车计时器故障
P160F	335	红色停车灯故障
P1610	335	
P1611	335	
P1612	335	

P0615	121	启动继电器故障
P0615	121	
P0617	121	
P0616	121	启动继电器故障
P1604	333	SVS灯故障
P1605	333	
P1606	333	
P1607	333	
P1608	118	软件重启开关故障
P1609	118	软件重启开关1故障
P160A	118	软件重启开关2故障
P2135	221	油门同步故障
P2135	221	用低怠速开关时候油门可信性故障
P1505	229	远程油门同步故障
P2530	345	T50开关故障
P0113	234	TAFS传感器故障
P0112	234	
P0113	234	
P0112	234	
P0099	233	CAN的进气温度传感器故障
P0098	233	进气温度传感器故障
P0097	233	
P0096	233	
P0669	119	ECU温度传感器故障
P0668	119	
P0000	361	节气门相关故障
P0000	362	
P0000	362	
P0000	362	
P0000	363	
P0000	363	
P0000	363	
P0000	363	
P0000	363	
P0000	363	
P0000	362	
P0000	362	
P0000	364	
P0000	364	
P0000	365	
P0000	365	
P0000	364	
P0000	364	
P0000	362	
P0000	362	
P0000	365	
P0000	365	
P0000	364	
P0113	236	进气温度传感器故障
P0112	236	
P0045	237	涡轮增压相关故障
P0049	237	
P0045	237	
P0048	237	
P0047	237	
U0113	448	下游排温相关故障
P0428	448	
P0427	448	
U0113	448	来自CAN的下游排温故障

微信搜索 蓝领星球

汽车维修资料

P042D	448	下游排温传感器故障
P042C	448	
P203F	445	尿素液位低故障
P2049	453	尿素喷射阀电路超限
P3009	453	尿素喷射阀故障
P2049	453	
P2049	453	
P2048	453	
P2047	453	
P3025	433	温度条件满足尿素压力管加热故障
P3069	461	电加热BL管相关故障
P3070	461	
P3071	461	
P3021	461	
P3072	461	
P3023	461	
P3022	461	
P3069	462	电加热PL管相关故障
P3070	462	
P3071	462	
P3021	462	
P3072	462	
P3023	462	
P3022	462	尿素加热主继电器故障
P3077	463	
P3043	463	
P3044	463	
P3045	463	
P3046	463	电加热SL管相关故障
P3069	464	
P3070	464	
P3071	464	
P3021	464	
P3072	464	
P3023	464	
P3022	464	尿素本加热相关故障
P3082	465	
P3083	465	
P3084	465	
P3033	465	
P3085	465	
P3037	465	
P3036	465	尿素箱加热相关故障
P3016	466	
P3018	466	
P3020	466	
P3019	466	尿素泵相关故障
P3001	451	
P3086	451	
P3002	451	
P3006	451	
P3003	451	
P3004	451	
P3005	451	尿素压力传感器故障
P3007	451	
P3007	451	
P204E	451	
P204D	451	

P204C	451	
P3047	452	尿素回流阀故障
P3048	452	
P3049	452	
P3050	452	
P3010	452	尿素回流阀故障
P3011	452	
P3013	452	
P3012	452	
P205A	446	来自CAN的尿素温度信号
P205D	446	尿素箱温度传感器故障
P205C	446	
P205B	446	尿素箱温度可信性故障
P205B	446	
U1405	224	来自CAN的车速故障
P0279	224	
P2162	224	
P0501	224	车速传感器故障
P0503	224	
P0502	224	
P2158	225	
P2160	225	车温传感器故障
P2161	225	
P1613	336	
P1614	336	琥珀灯故障
P1615	336	
P1616	336	

获取更多资料 微信搜索 蓝领星球