CHAPTER

7

室内外机电路图

7.1 室内机电路图

■ R22系列

● 型号 MCC008T、MCC010T、MCC015T、MCC018T、MCC020T、MCC025T、MCC030T、MCC040T、MCC050T、MCC060T

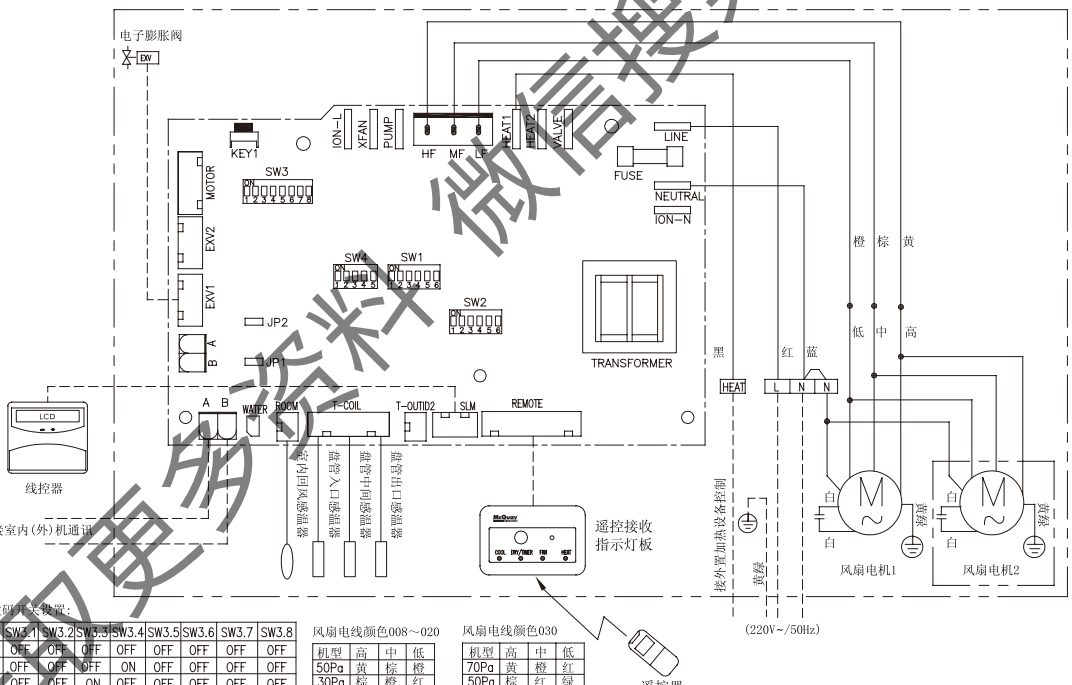

SW3拨码开关设置：

机型	SW3.1	SW3.2	SW3.3	SW3.4	SW3.5	SW3.6	SW3.7	SW3.8
008	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
010	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF
015	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF
018	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF
020	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF
025	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF
030	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF
040	OFF	ON	ON	ON	OFF	OFF	OFF	OFF
050	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF
060	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF

风扇电线颜色008～020

机型	高	中	低
50Pa	黄	棕	橙
30Pa	棕	橙	红
15Pa	橙	红	绿
0Pa	红	绿	白

风扇电线颜色030

机型	高	中	低
70Pa	黄	橙	红
50Pa	棕	红	绿
30Pa	橙	绿	白
15Pa	橙	绿	白

风扇电线颜色025

机型	高	中	低
50Pa	黄	棕	红
30Pa	棕	红	绿
15Pa	橙	绿	白
0Pa	红	绿	白

风扇电线颜色040～060

机型	高	中	低
70Pa	黄	橙	绿
50Pa	棕	红	绿
30Pa	橙	绿	白
15Pa	橙	绿	白

出厂静压设置：

008～025机型：15Pa
030机型　：　30Pa
040～060机型：50Pa

说明：

1. 跳线设置：JP1设为断开，若是通讯连接的最后一台，请闭合；JP2设为断开，若接集中控制器，最后一台请闭合。
2. SW2为本机地址设置，场设置；SW1,SW4全设为OFF。
3. 请短接水位开关WATER。
4. 040以下机型无风扇电机2。
5. 配置外置加热设备时请将拨码SW1.1设置为ON。
6. 线控器和遥控接收指示灯板任选其中一个接控制模块。
7. - - - - - - - 现场接线。

获取更多资料 微信搜索蓝领星球